


How to use the interchangeable strap


Some straps have features that make them easier to remove.
By following the instructions below, you can remove and attach the strap.

How to remove the strap


1. Press the steel rod downward to release the strap.

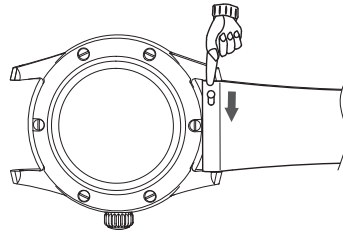

2. While pressing the steel rod downward, move the strap backward to release it from the case lug.

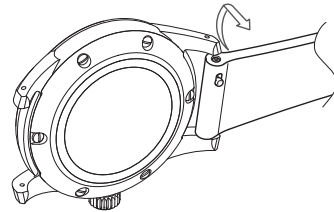


3. Take off the strap completely.

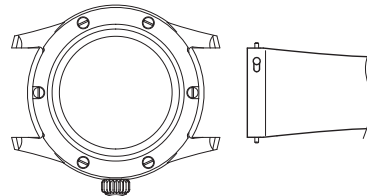


How to attach the strap

1. Place the strap between the case lugs and insert the spring bar into the spring bar hole.

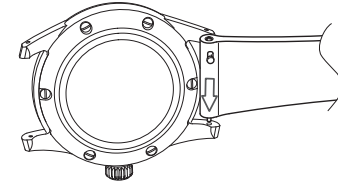

2. Press the steel rod downward to move the strap into the case lugs.

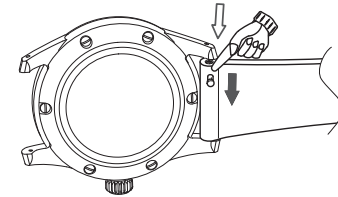

3. Pull the strap to test properly.

