

How to use the micro-adjustment clasp


* How to use the micro-adjustment clasp on models starting with "SLG."

Micro adjustment of up to approximately 6 mm is possible.
(Adjustable in three steps of 2 mm each)




How to lengthen the band

1. Grab the band and raise it against the buckle.

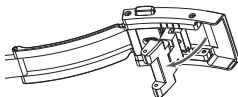


2. Release the lock by grabbing the end and pushing it against the buckle (①). Slide it to the desired position while pressing it in (②).

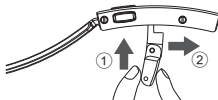


* Please be careful not to pinch your fingers during this procedure.

* There are a total of four adjustment positions, including the initial position. Move the ▲ mark to align with the I mark guide.

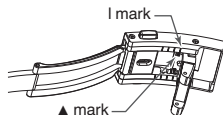

3. Release once you have aligned with the desired position. The lock is engaged by the force of the spring.

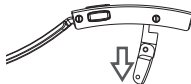

4. Rotate the band back against the buckle to return it to its closed position.



How to shorten the band

The above procedure is unnecessary to shorten the band; simply push the band in to adjust the length.

